

PL

EVER
 POWER SYSTEMS

KARTA EPO DO UPS EVER SINLINE RT XL

SKRÓCONA INSTRUKCJA OBSŁUGI

 Uwaga! Aby uzyskać szczegółowe informacje, należy przeczytać pełną instrukcję obsługi zasilacza zamieszczoną na www.ever.eu

1. W OPAKOWANIU

1




Karta EPO

2



Gwarancja

3



Skrócona instrukcja obsługi

4



Zworka EPO

2. UWAGI EKSPLOATACYJNE



UWAGA!

1. Montaż oraz demontaż karty należy przeprowadzać na wyłączonym zasilaczu.
2. Obwód EPO musi być obwodem wydzielonym i niedopuszczalne jest łączenie go z innymi instalacjami


3. INSTALACJA KARTY W ZASILACZU

1



Za pomocą panelu sterowania przejść do dowolnego ekranu informacyjnego (np. STATUS UPS)

2

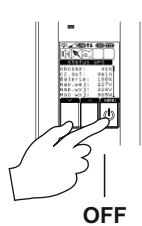

OFF

Wcisnąć i przytrzymać przycisk > 1 s aby wyłączyć UPS

3



 Nastąpi wyłączenie UPS
 Kontynuować?

OK ANULUJ

Przed wykonaniem polecenia zostanie wyświetlone dodatkowe okno z prośbą o potwierdzenie wykonania polecenia wyłączenia UPS:


Dopiero po akceptacji polecenia za pomocą przycisku OK zasilacz zostanie wyłączony.

4

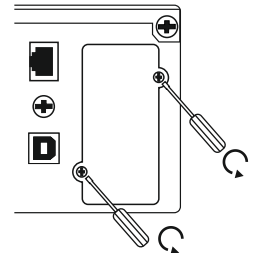


Odkręcić maskownicę gniazda karty rozszerzeń

5

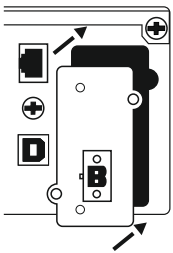


Wsunąć kartę do komory, zwracając uwagę na poprawność jej montażu.

6

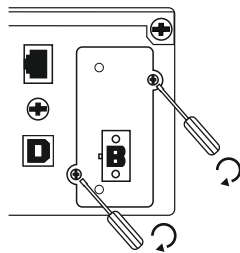

Przykręcić maskownicę karty do panelu tylnego

7

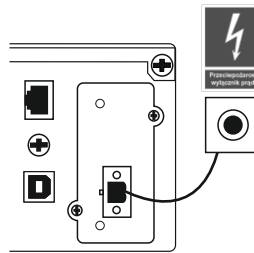

Do złącza karty podłączyć zewnętrzny obwód - przeciwpożarowy wyłącznik prądu (EPO)


8




ON

Wcisnąć i przytrzymać przycisk > 1 s aby włączyć UPS

9

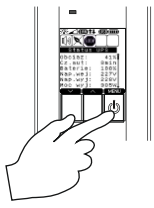

Za pomocą panelu sterowania włączyć logicznie zasilacz (MENU; KONTROLA; UPS aktywny)

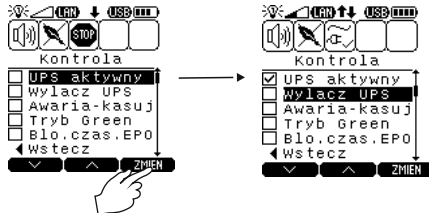

Potwierdzeniem tego, że karta została prawidłowo zainstalowana i wykryta przez zasilacz jest pojawienie się w Submenu KONTROLA parametru Blo.czas.EPO. - czasowa dezaktywacja (1min) wejścia EPO.

4. KONTAKT

EVER Sp. z o.o.

 ul. Wołczyńska 19
 60-003 Poznań, Polska

 Tel.: +48 61 6500 400
 Faks: +48 61 6510 927

ups@ever.eu
www.ever.eu

Dział Serwisu

 Tel.: +48 61 6500 419
serwis@ever.eu

EN

EVER
POWER SYSTEMS

EPO CARD FOR SINLINE RT XL UPS UNITS

QUICK REFERENCE GUIDE

Caution! For more detailed information read the complete UPS operating instructions at www.ever.eu

1. IN THE PACKAGING

1




EPO card

2



Warranty card

3



Quick reference guide

4



EPO jumper

2. OPERATING NOTES



1. The card can be installed or uninstalled only when the UPS is off.
2. The EPO circuit must be a separate circuit and must not be connected with other installations.


3. INSTALLING THE CARD IN THE UPS

1



In the control panel go to any information screen (e.g. UPS STATUS)

2

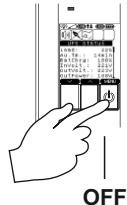

OFF

Press the key and keep it depressed for over 1 second to switch the UPS off.


3



Prior to executing the command, an additional window prompting the user to confirm the switch off command will be displayed:


The UPS will be switched off once the command is confirmed by pressing the key.

4

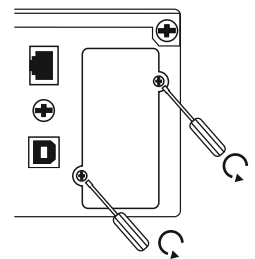


Undo the screws of the expansion slot cover.

5

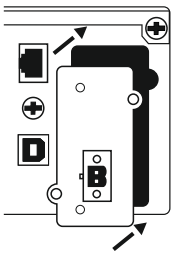


Insert the card, making sure it is aligned properly.

6

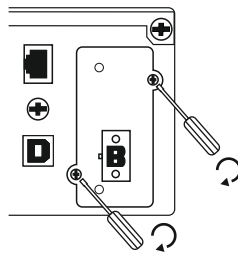

Install the card slot cover to the rear panel.

7

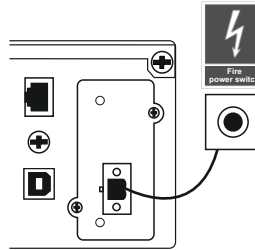

Connect an external EPO circuit - a fire protection breaker - to the card's connector.


8



ON

Press and keep the key on the UPS unit's front panel depressed for over 1 second to switch the device on.

9

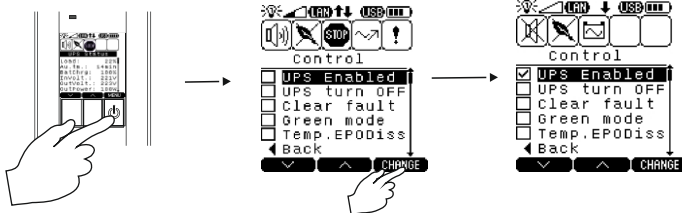

Use the control panel to switch the UPS on logically (MENU; CONTROL; UPS Enabled)

Use the control panel to switch the UPS on logically (MENU; CONTROL; UPS Enabled)
If the card has been correctly installed and identified by the UPS, the Temp.EPODiss - temporary EPO input deactivation (1 min.) parameter appears in the CONTROL sub-menu.

4. CONTACT

EVER Sp. z o.o.

ul. Wolczyńska 19
60-003 Poznań, Poland

Phone: +48 61 6500 400
Fax: +48 61 6510 927

ups@ever.eu
www.ever.eu



Service

Phone: +48 61 6500 419
serwis@ever.eu